

GP-3500/3600/3700 Series Installation Guide

Caution


Be sure to read the "Warning/Caution Information" on the attached sheet before using the product.

Package Contents

- (1) GP Unit (1)
- (2) English and Japanese installation Guides (1 of each) <This Guide>
- (3) Warning/Caution Information (1)
- (4) Installation Gasket (1, attached to the GP unit)
- (5) Installation Fasteners (Set of 4)
(2 sets of 4 for AGP-3750T only)



- (6) RCA-BNC Converter (1)
(Only for AGP-3550T, AGP-3560T, AGP-3650T/U, AGP-3750T)



- (7) AUX Connector
(1, Attached to the GP unit)



- (8) Power Connector (1)
(Attached to the GP unit for DC type)



- (9) USB Cable Clamp (2 port) (1 set)
(Holder: 1, Cover: 2)



This unit has been carefully packed, with special attention to quality. However, should you find anything damaged or missing, please contact your local GP distributor immediately.

About the Manual

For the detailed information on GP3000 series, refer to the following manuals.

- GP3000 Series Hardware Manual
- Maintenance/Troubleshooting

The manuals can be selected from the help menu of GP-Pro EX or downloaded from Pro-face Home Page.

URL

<http://www.pro-face.com/otasuke/>

About Revision

The nameplate on the GP has the revision number of the GP. In the example below, the asterisk, which is placed at the "5" position, shows that the revision number is "5".



Industrial automation

Elincom Group




European Union: www.elinco.eu



Russia: www.elinc.ru

Part Names and Functions

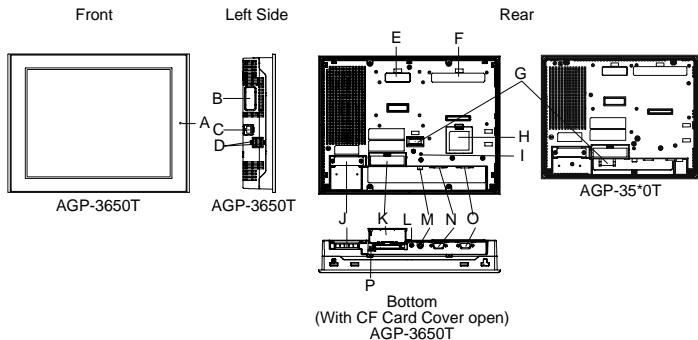

Name		Description				
A	Status LED	Color	Indicator	Operation Mode (Drawing)	Logic execution mode (when logic is enabled)	
		Green	ON	OFFLINE	—	
				In operation	RUN	
		Red	ON	Flashing	In operation	STOP
				ON	When power is turned on.	
		Orange	ON	Flashing	In operation	Major Error
ON	Backlight burnout or GP malfunction ¹					
		Flashing	During software startup			
*1 Please see GP3000 Series Hardware Manual "Replacing the Backlight" for the details.						
B	Expansion Unit Interface (EXT)	Used to connect an expansion unit that can transmit data.				
C	Ethernet Interface (LAN)	10BASE-T/100BASE-TX This interface uses an RJ-45 type modular jack connector (8 pins).				
D	USB Host Interface (USB)	2 ports Complies with USB 1.1. Uses a "TYPE-A" connector. Power supply voltage:5 VDC ±5%, Output current:500mA(max.) The maximum communication distance: 5m				
E	Expansion Unit Interface ^{*1}	Used to connect an expansion unit that can transmit data.				

F	VM Unit Interface* ¹	The interface which connects the VM unit manufactured by Digital Electronics Corporation. (This interface is available only in units with embedded color LCD TFT display.)
G	Auxiliary input/output / Voice Output Interface (AUX)	This interface is External Reset, Alarm Output, Buzzer Output, and sound output.
H	Expansion Memory Interface Cover	Remove the cover to add more memory.
I	CF Card Access LED	Lit in green when the CF Card is inserted and the cover is closed, or when the CF Card is being accessed. NOTE <ul style="list-style-type: none"> Do not remove or insert the CF Card when the LED lamp is on. Doing so may damage data on the CF Card.
J	Power Connector	DC model: Power Socket Connector AC model: Power Input Terminal Block
K	CF Card Cover	—
L	AUDIO Input Interface (L-IN/MIC)	It's an interface to which a microphone is connected. A mini jack connector (∅3.5 mm) is used. (Supported by AGP-3550T, AGP-3560T, AGP-3650T/U, AGP-3750T only)
M	VIDEO Input Interface (V-IN)	It's an interface to which a video camera is connected. NTSC (59.9 Hz) and PAL (50 Hz) are supported. A RCA connector (75Ω) is used. (Supported by AGP-3550T, AGP-3560T, AGP-3650T/U, AGP-3750T only)
N	Serial Interface (COM1)	D-Sub 9-pin plug type. RS232C, RS422, and RS485 are switched by software.
O	Serial Interface (COM2)	D-Sub 9-pin socket type. RS422 and RS485 are supported.
P	Dip Switches	Located inside the CF Card Cover.

*1 The Expansion Unit Interface 1 and VM Unit Interface cannot be used simultaneously with AGP-3500T/3550T/3560T.

General Specifications

■ Electrical Specifications

		DC Model	AC Model	
Power Supply	Input Voltage	DC 24V	AC 100 to 240 V	
	Rated Voltage	DC 19.2 to 28.8 V	AC 85 to 265 V	
	Allowable Voltage Drop	10 ms (max.)	1 cycle or less (Voltage drop interval must be 1s or more.)	
	Power Consumption	AGP-3500L AGP-3500S	DC 24 V 2.08 A or less (TYP 1.08 A)	AC 100 V 0.90 A or less (TYP 0.45 A) AC 240 V 0.45 A or less (TYP 0.26 A)
		AGP-3500T AGP-3510T AGP-3550T AGP-3560T	DC 24 V 2.08 A or less (TYP 1.22 A)	AC 100 V 0.90 A or less (TYP 0.58 A) AC 240 V 0.45 A or less (TYP 0.29 A)
		AGP-3600T AGP-3650T	<ul style="list-style-type: none"> When GP Rev.5 is NOT marked *1 DC 24 V 2.08 A or less (TYP 1.30 A) When GP Rev.5 is marked *1 DC 24 V 2.08 A or less (TYP 1.0 A) 	<ul style="list-style-type: none"> When GP Rev.5 is NOT marked *1 AC 100 V 0.90 A or less (TYP 0.55 A) AC240 V 0.45A or less (TYP 0.30A) When GP Rev.5 is marked *1 AC 100 V 0.90 A or less (TYP 0.40 A) AC240 V 0.45A or less (TYP 0.23A)
		AGP-3600U AGP-3650U	DC 24 V 2.08 A or less (TYP 1.50 A)	AC 100 V 0.90 A or less (TYP 0.55 A) AC240 V 0.45A or less (TYP 0.30A)
		GP-3700 Series	50 W or less	AC 100 V 1.1 A or less (TYP0.75 A) AC 240 V 0.7 A or less (TYP0.44 A)
In-Rush Current	30 A (max.)	60 A (max.)		
Voltage Endurance	AC 1000 V 20 mA for 1 minute (between charging and FG terminals)	AC 1500 V 20 mA for 1 minute (between charging and FG terminals)		
Insulation Resistance	DC 500 V 10 MΩ (min.) (between charging and FG terminals)			

*1 For details on how to check the revision, See "About Revision" (page 1)

■ Environmental Specifications

Physical	Surrounding Air Temperature	0 to 50 °C*1
	Storage Temperature	-20 to +60 °C
	Ambient Humidity	10 to 90 % RH (Wet bulb temperature: 39 °C max. - no condensation.)
	Storage Humidity	10 to 90 % RH (Wet bulb temperature: 39 °C max. - no condensation.)
	Dust	0.1 mg/m ³ and below (non-conductive levels)
	Pollution Degree	For use in Pollution Degree 2 environment.

*1 When using STN Color LCD model in an environment where the temperature becomes or exceeds 40 °C for an extended period of time, the screen contrast level may decrease from its original level of brightness.

■ Structural Specifications

		GP-35/36/3700 Series except AGP-36*0U	AGP-36*0U
Installation	Grounding	Grounding resistance of 100Ω, 2mm ² or thicker wire, or your country's applicable standard.(Same for FG and SG terminals)	
	Structure*1	Rating: Equivalent to IP65f NEMA #250 TYPE 4X/13 (Front surface at panel embedding) Feature size: All-in-one Installation configuration: Panel embedding	Rating: IP65f (Front surface at panel embedding) Feature size: All-in-one Installation configuration: Panel embedding
	Cooling Method	Natural air circulation	

*1 The front face of the GP unit, installed in a solid panel, has been tested using conditions equivalent to the standards shown in the specification. Even though the GP unit's level of resistance is equivalent to these standards, oils that should have no effect on the GP can possibly harm the unit. This can occur in areas where either vaporized oils are present, or where low viscosity cutting oils are allowed to adhere to the unit for long periods of time. If the GP's front face protection sheet becomes peeled off, these conditions can lead to the ingress of oil into the GP and separate protection measures are suggested. Also, if non-approved oils are present, it may cause deformation or corrosion of the front panel's plastic cover. Therefore, prior to installing the GP be sure to confirm the type of conditions that will be present in the GP's operating environment.

If the installation gasket is used for a long period of time, or if the unit and its gasket are removed from the panel, the original level of the protection cannot be guaranteed. To maintain the original protection level, be sure to replace the installation gasket regularly.

External Interfaces

IMPORTANT

- For instructions on how to connect to other devices, always refer to the “GP-Pro EX Device/PLC Connection Manual”.
- Always connect the #5 SG (Signal Ground) of the GP unit to the connected device, especially if the connected device is also not isolated. Failure to do so may damage the RS232C/RS422/RS485 circuit.

■ COM1

Recommended Cable Connector	XM2D-0901 <made by OMRON Corp.>
Recommended Jack Screw	XM2Z-0073 <made by OMRON Corp.>
Recommended Cable Cover	XM2S-0913 <made by OMRON Corp.>
Fitting fastener	#4-40 (UNC)

Pin #	RS232C		RS422/RS485	
	Signal Name	Meaning	Signal Name	Meaning
1	CD	Carrier Detect	RDA	Receive Data A(+)
2	RD(RXD)	Receive Data	RDB	Receive Data B(-)
3	SD(TXD)	Send Data	SDA	Send Data A(+)
4	ER(DTR)	Data Terminal Ready	ERA	Data Terminal Ready A(+)
5	SG	Signal Ground	SG	Signal Ground
6	DR(DSR)	Data Set Ready	CSB	Clear to Send B(-)
7	RS(RTS)	Request to Send	SDB	Send Data B(-)
8	CS(CTS)	Clear to Send	CSA	Clear to Send A(+)
9	CI(RI)/VCC	Called status display/ +5 V \pm 5 % Output 0.25 A ^{*1}	ERB	Data Terminal Ready B(-)
Shell	FG	Frame Ground (Common with SG)	FG	Frame Ground (Common with SG)

*1 The RI/VCC selection for Pin #9 is switched via software. The VCC output is not protected against overcurrent. To prevent damage or unit malfunctions, use only the rated current.

■ COM2

NOTE

- Always connect close to the GP unit's COM port when terminating with the termination pins (TRMRX/TRMTX).


Recommended Cable Connector	XM2A-0901 <made by OMRON Corp.>
Recommended Jack Screw	XM2Z-0073 <made by OMRON Corp.>
Recommended Cable Cover	XM2S-0913 <made by OMRON Corp.>
Fitting fastener	#4-40 (UNC)

Pin #	RS422/RS485	
	Signal Name	Meaning
1	TRMRX	Termination (Receiver side: 100 Ω)
2	RDA	Receive Data A(+)
3	SDA	Send Data A(+)
4	RS(RTS)	Request for Send
5	SG	Signal Ground
6	VCC	+5 V ±5 % Output 0.25 A ^{*1}
7	RDB	Receive Data B(-)
8	SDB	Send Data B(-)
9	TRMTX	Termination (Receiver side: 100 Ω)
Shell	FG	Frame Ground (Common with SG)


*1 The VCC output for Pin #6 is not protected against overcurrent. To prevent damage or unit malfunctions, use only the rated current.

■ AUX Input/Output and Sound Output Interface


GP Unit Side Connector	AGP-35*0T:	S2L3.5/12/90F <made by Weidmuller>
	AGP-3500L/AGP-3500S/ GP-3600/3700 series:	S2L3.5/12/180F <made by Weidmuller>
Terminal Block	B2L3.5/12LH <made by Weidmuller>	

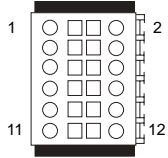Pin Arrangement	Pin#	Signal Name	Direction	Meaning
 <p>(Cable connection side)</p>	1	RESET IN_A	Input	External Reset Input
	2	RESET IN_B	Input	
	3	RUN+	Output	RUN Signal
	4	RUN-	Output	
	5	ALARM+	Output	ALARM Signal
	6	ALARM-	Output	
	7	BUZZER+	Output	Buzzer Signal
	8	BUZZER-	Output	
	9	NC	-	Not Connected
	10	NC	-	Not Connected
	11	SP	Output	Speaker Out
	12	SP_GND	Output	Speaker Ground

• Input Circuit

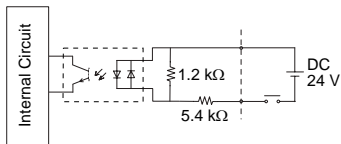

• Output Circuit

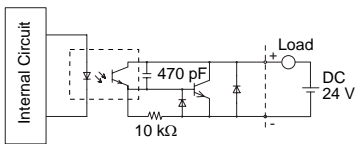


Installations


1. Installation Requirements

- For easier maintenance, operation, and improved ventilation, be sure to install the GP at least 100 mm [3.94 in.] away from adjacent structures and other equipment.

Unit:mm[in.]

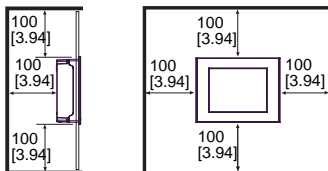

- Be sure that the surrounding air temperature and the ambient humidity are within their designated ranges. (Surrounding air temperature: 0 to 50 °C, Ambient humidity: 10 to 90 %RH, Wet bulb temperature: 39 °C max.) When installing the GP on the panel of a cabinet or enclosure, "Surrounding air temperature" indicates both the panel face and cabinet or enclosure's internal temperature.

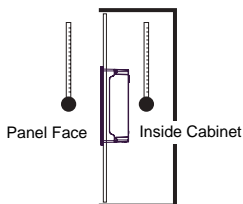


- Be sure that heat from surrounding equipment does not cause the GP to exceed its standard operating temperature.

2. GP Installation

- Create a Panel Cut and insert the GP into the panel from the front.

Unit: mm [in.]


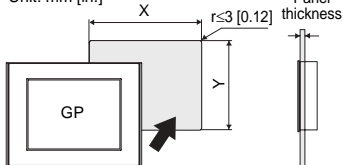


GP	X	Y	Panel thickness
AGP-3500T AGP-3510T AGP-3550T AGP-3560T	259.0 ⁺¹ ₋₀ [10.20 ^{+0.04} ₋₀]	201.0 ⁺¹ ₋₀ [7.91 ^{+0.04} ₋₀]	1.6 [0.06] to 10.0 [0.39]
AGP-3500L AGP-3500S AGP-3600T/U AGP-3650T/U	301.5 ⁺¹ ₋₀ [11.87 ^{+0.04} ₋₀]	227.5 ⁺¹ ₋₀ [8.96 ^{+0.04} ₋₀]	
AGP-3750T	383.5 ⁺¹ ₋₀ [15.10 ^{+0.04} ₋₀]	282.5 ⁺¹ ₋₀ [11.12 ^{+0.04} ₋₀]	

- Confirm that the installation gasket is attached to the GP unit and then place the GP unit into the Panel from the front.

IMPORTANT

- It is strongly recommended that you use the installation gasket, since it absorbs vibration in addition to repelling water. For the procedure for replacing the installation gasket, refer to "GP3000 Series Hardware Manual".
- The following figures show the four (4) fastener insertion slot locations. (Only the AGP-3750T has eight (8) slot locations.) Insert each fastener's hook into the slot and tighten it with a screwdriver. Insert the installation fasteners securely into the insertion slot recess.

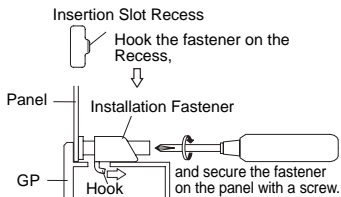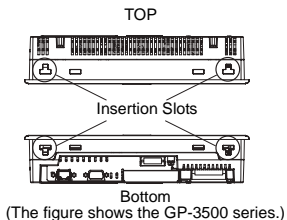

IMPORTANT

- Tightening the screws with too much force can damage the GP unit's plastic case.
- The necessary torque is 0.5 N•m.

3. Wiring and attaching/detaching the AUX connector

IMPORTANT

- Be sure to remove the AUX Connector from the GP unit prior to starting wiring. Failure to do so may cause an electric shock.

■ Items Required to Wire Connectors [Screwdriver]

Recommended type: SDI (Product No. 900837) <Weidmuller Japan>
If another manufacturer is used, be sure the part has the following dimensions:
point depth: 0.4 mm [0.02 in.]
point height: 2.5 mm [0.10 in.]
length from the point to the handle: 80 mm [3.15 in.]
Point shape should be DIN5264A, and meet Security Standard DN EN60900.

Also, the screwdriver's tip should be flat as indicated in order to access the narrow hole of the connector:




■ Detachment

Turn the tabs on the levers at both ends of the connector, and the connector is released from the GP.

■ Wiring and attachment

- (1) Insert the tip of the screwdriver into one of the square holes. Then, insert the cable into the corresponding round hole. When you pull out the screwdriver, the cable is locked. For the pin assignment of the AUX connector, refer to "External Interfaces".

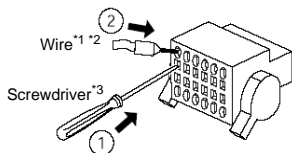

- (2) Insert the wired AUX connector into the auxiliary I/O or sound output interface (AUX) the rear (or the bottom for the AGP-35*0T of the GP unit). If the connector cannot be fully inserted, turn the tabs on the levers at both ends of the connector in the reverse direction and insert the connector.

*1 Wire should be AWG 22 to AWG 18 thick, and twisted.
Applicable wire sizes are UL1015 and UL1007.

*2 Be sure to strip from 6.5 to 8.0 mm [0.26 to 0.31 in.] of cover from the wire.

IMPORTANT

- Be sure to strip only the amount of cover required. If too much cover is removed, the end wires may short against each other, or against an electrode, which can create an electric

shock. If not enough cover is removed the wire cannot carry a charge.

- Do not solder the wire itself. This could lead to a bad or poor contact.
- Insert each wire completely into its opening. Failure to do so can lead to a unit malfunction or short, either against wire filaments, or against an electrode.

*3 Do not rotate the point of the screwdriver inside the square-shaped opening. It may cause a malfunction.

Wiring

⚠ WARNING

- To avoid an electric shock, prior to connecting the GP unit's power cord terminals to the power terminal block, confirm that the GP unit's power supply is completely turned OFF, via a breaker, or similar unit.
- Any other power level can damage both the GP and the power supply.
- When the FG terminal is connected, be sure the wire is grounded.



1. Wiring the AC type power supply cable

IMPORTANT

- When the FG terminal is connected, be sure the wire is grounded. Not grounding the GP unit will result in excessive noise. Use your country's applicable standard for grounding.

Power Cord Specifications

Use copper conductors only.

	AC Power Cord	Grounding Wire
Power Cord Diameter	Double-Insulation Wire 1.25 mm ² to 2.0 mm ² [0.0024 inch ² to 0.0062 inch ²] (16 to 14 AWG)	1.25 mm ² to 2.0 mm ² [0.0024 inch ² to 0.0062 inch ²] (16 to 14 AWG)
Recommended Ring Terminal	V2-MS3 compatible (J.S.T. Mfg. Co.,Ltd). Over Φ3.2 mm [0.13 in.] Under 6.0 mm [0.24 in.] 	V2-P4 compatible (J.S.T. Mfg. Co.,Ltd). Over Φ4.3 mm [0.17 in.] Under 7.0 mm [0.28 in.] 


*1 In order to prevent a short circuit caused by loose screws, make sure to use a crimp-type terminal with insulating sleeve.

Connecting the GP Power Cord

- Be sure that the GP's power cord is not plugged in to the power supply.
- Remove the Terminal Strip's clear plastic cover.
- Remove the screws from the two (2) terminals (L,N) and FG (Frame Ground) Terminal, position the Ring Terminals and reattach the screws. (Check each wire to make sure the connections are correct)

IMPORTANT

- The torque required to tighten these screws are as follows:
Terminal Block: 0.5 to 0.6 N•m.
FG (Frame Ground) Terminal: 0.6 to 0.7 N•m.

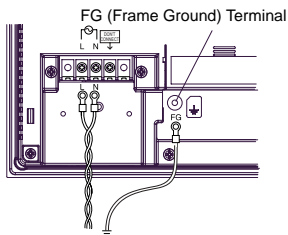


- (4) Reattach the Terminal Strip's clear plastic cover.

2. Wiring the DC Type Power Cord


■ Power Cord Specifications

Use copper conductors only.

Power Cord Diameter	0.75 to 2.5 mm ² (18 - 12 AWG)
Conductor Type	Simple or Stranded Wire *1
Conductor Length	

*1 If the Conductor's end (individual) wires are not twisted correctly, the end wires may either short against each other, or against an electrode.

■ Power Connector (Plug) Specifications

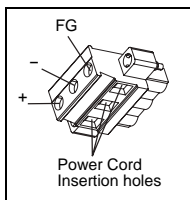	+	24V
	-	0V
	FG	Grounding Terminal connected to the GP chassis

NOTE

- The power connector (plug) is CA5-DCCNL-01 made by Pro-face or

GMVSTBW2,5/3-STF-7,62 made by Phoenix Contact.

When connecting the Power Cord, use the following items when performing wiring. (Items are made by Phoenix Contact.)


Recommended Driver	SZF 1-0.6x3.5 (1204517)
Recommended Pin Terminals	AI 0.75-8GY (3200519) AI 1-8RD (3200030) AI 1.5-8BK (3200043) AI 2.5-8BU (3200522)
Recommended Pin Terminal Crimp Tool	CRIMPFOX ZA 3 (1201882)

■ Connecting the GP Power Cord

- Confirm that the GP unit's Power Cord is unplugged from the power supply.
- Remove the power connector (plug) from the GP unit.
- Loosen the three screws in the center of the Power Connector.
- Strip the power cord, twist the conductor's wire ends, insert them into the pin terminal and crimp the terminal. Attach the terminal to the power connector.
- Fix it with screws.

IMPORTANT

- Use a flat-blade screwdriver (Size 0.6 X 3.5) to tighten the terminal screws. The torque required to tighten these screws is 0.5 to 0.6 N•m [5-7 Lb•In.].
- Do not solder the cable connection. Doing so may damage the unit due to abnormal heat or cause a fire.

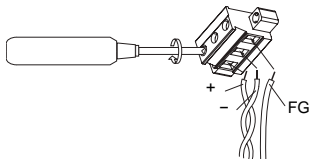


- (6) Attach the Power Connector to the GP and fix it to the GP main unit with right/left tightening screws.

3. Power Supply Cautions

- Input and Output signal lines must be separated from the power control cables for operational circuits.
- To improve noise resistance, be sure to twist the ends of the power cord wires before connecting them to the Power connector (Plug).
- The GP unit's power supply cord should not be bundled with or kept close to main circuit lines (high voltage, high current), or input/output signal lines.
- To reduce noise, make the power cord as short as possible.
- If the supplied voltage exceeds the GP unit's range, connect a voltage transformer.
- Be sure to use a low noise power supply between the line and the ground. If there is an excess amount of noise, connect a noise reducing transformer.
- The temperature rating of field installed conductors: 75 °C only.

IMPORTANT

- Be sure to ground the surge absorber (E1) separately from the GP unit (E2). Select a surge absorber that has a maximum circuit voltage greater than that of the peak voltage of the power supply.




4. Grounding Cautions


- Be sure to create an exclusive ground for the Power Cord's FG terminal. Use a grounding resistance of 100 Ω, a wire of 2 mm² or thicker, or your country's applicable standard.
- The SG (signal ground) and FG (frame ground) terminals are connected internally in the GP unit. When connecting the SG line to another device, be sure that the design of the system/connection does not produce a shorting loop.
- The grounding wire should have a cross sectional area greater than 2 mm². Create the connection point as close to the GP unit as possible, and make the wire as short, as possible. When using a long grounding wire, replace the thin wire with a thicker wire, and place it in a duct.

IMPORTANT


- Use voltage and noise reducing transformers with capacities exceeding Power Consumption value.
- Must be used with a Class 2 Power Supply. (24 VDC)
- Connect a surge absorber to handle power surges.

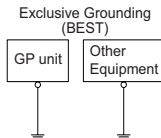

Common Grounding (OK)



Common Grounding (Not OK)



5. Input/Output Signal Line Cautions

- All GP Input and Output signal lines must be separated from all operating circuit (power) cables.
- If this is not possible, use a shielded cable and ground the shield.

Securing the USB cable connection


IMPORTANT

- When using USB Host Interface in Hazardous Locations provided in UL1604, please fix the USB cable with the USB Holder. If it's not fixed so that the connector on the GP's side and the PLC's side cannot come out, the USB Host Interface cannot be used in the Hazardous Locations.

■ Attaching the USB Holder

- (1) Before starting the procedure, orient the two tabs on both sides of the USB

Holder in the direction of the arrows in the figure and remove the USB Cover.

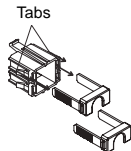


- (2) Attach the USB holder to the USB Host Interface part of the main unit. Hook the lower pick of the USB holder to the attachment hole of the main unit and then insert the upper pick as shown below to fix the USB holder.

GP-3500/3600 Series GP-3700 Series




- (3) Insert the USB cable into the USB Host Interface.

GP-3500/3600 Series GP-3700 Series

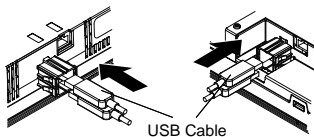

- (4) Attach the USB cover to fix the USB cable. Insert the USB cover into the tab of the USB holder.

GP-3500/3600 Series GP-3700 Series

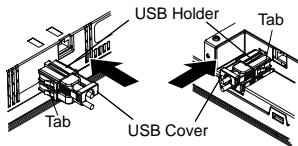

In case of installing the second USB cable, repeat the step 3, 4.


IMPORTANT

- When using the GP, be sure to attach all the 2 USB covers.

■ Removing the USB Holder

- (1) Lift up the tab of the USB holder and then remove the USB cover as shown below.

GP-3500/3600 Series GP-3700 Series

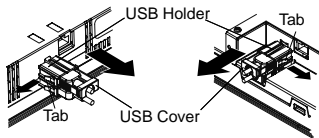

- (2) After removing the USB cable, remove the picks pushing the USB holder from both top and bottom.

UL/c-UL/CSA Approval

<Cautions>

Be aware of the following items when building the GP into an end-use product:

- The GP unit's rear face is not approved as an enclosure. When building the GP unit into an end-use product, be sure to use an enclosure that satisfies standards as the end-use product's overall enclosure.
- The GP unit must be used indoors only.
- Install and operate the GP with its front panel facing outwards.
- If the GP is mounted so as to cool itself naturally, be sure to install it in a vertical panel. Also, it's recommended that the GP should be mounted at least 100mm away from any other adjacent structures or machine parts. The temperature must be checked on the final product in which the GP is installed.
- Serial Interface (COM2) is not Limited Power Source.

- For use on a flat surface of a Type 4X (Indoor Use Only) and/or Type 13 Enclosure.

For use on a flat surface of a Type 1 Enclosure (AGP3650-U1-D24 only).

UL1604/CSA-C22.2, No.213 -

Compliance and Handling Cautions

- (1) Power and input/output wiring must be in accordance with Class I, Division 2 wiring methods - Article 501-10(B) of the National Electrical Code, NFPA 70 within the United States, and in accordance with Section 18-152 of the Canadian Electrical Code for units installed within Canada.
- (2) Suitable for use in Class I, Division 2, Groups A, B, C, and D Hazardous Locations, or Non-Hazardous Locations only.
- (3) "WARNING: Explosion hazard-substitution of components may impair suitability for Class I, Division 2", and "AVERTISSEMENT: RISQUE D'EXPLOSION-LA SUBSTITUTION DE COMPOSANTS PEUT RENDRE CE MATERIAL INACCEPTABLE POUR LES EMPLACEMENTS DE CLASSE I, DIVISION2".
- (4) WARNING: Explosion hazard-when in hazardous locations, turn OFF power before replacing or wiring modules.
- (5) WARNING: Explosion hazard-confirm that the power supply has been turned OFF before disconnecting equipment, or confirm that the location is not subject to the risk of explosion.
- (6) "WARNING: Explosion hazard-do not disconnect equipment unless power has been switched off or the area is known to be Non-Hazardous", and "AVERTISSEMENT: RISQUE D'EXPLOSION-AVANT DE DECONNECTER L'EQUIPEMENT, COUPER LE COURANT OU S'ASSURER QUE

L'EMPLACEMENT EST DESIGNÉ
NON DANGEREUX”.

- (7) In the case of use in Hazardous Locations, be sure to check that the externally connected unit and each interface have been fixed with screws and locked.
In Hazardous Locations, it's impossible to insert or pull the cable from the applicable port. Be sure to check that the location is Non-Hazardous before inserting or pulling it.

CE Marking

- The AGP3500-S1-AF/AGP3500-T1-AF/AGP3510-T1-AF/AGP3550-T1-AF/AGP3560-T1-AF/AGP3600-T1-AF/AGP3650-T1-AF/AGP3750-T1-AF units are CE marked, EMC directives and Low Voltage Directive compliant products. These units also conform to EN55011 Class A, EN61000-6-2 directives and EN60950-1 directives.
- AGP3500-L1-D24/AGP3500-S1-D24/AGP3500-T1-D24/AGP3600-T1-D24/AGP3650-T1-D24/AGP3650-U1-D24/AGP3750-T1-D24 units are CE marked, EMC compliant products. These units also conform to EN55011 Class A, EN61000-6-2 directives.

Inquiry

Do you have any questions about difficulties with your GP?
Please access our site anytime that you need help with a solution.

<http://www.pro-face.com/otasuke/>

Note

Please be aware that Digital Electronics Corporation shall not be held liable by the user for any damages, losses, or third party claims arising from the uses of this product.

Digital Electronics Corporation
8-2-52 Nanko-higashi
Suminoe-ku, Osaka 559-0031
JAPAN
TEL: +81-(0)6-6613-3116
FAX: +81-(0)6-6613-5888
<http://www.pro-face.com>

The information in this document is subject to change without notice.
© Copyright 2005 Digital Electronics Corporation. All rights reserved.
PFX125344A
.AGP35/36/3700-MT06E-BTH
2011.2 SS/B